

Operating instructions

Heating actuator basic, 6-gang
Art. no. 2114 00



Table of Contents

1 **Safety instructions** 3

2 **Device components** 4

3 **Function** 4

4 **Information for electrically skilled persons** 5

 4.1 **Mounting and electrical connection**..... 5

 4.2 **Commissioning** 8

5 **Technical data** 8

6 **Troubleshooting** 9

7 **Accessories** 9

8 **Warranty** 10

1 Safety instructions

To avoid potential damage, read and follow the following instructions:



Installation only by persons with relevant knowledge and experience in the following areas:

- Five safety regulations and standards for the installation of electrical systems
- Selection of suitable tools, measuring devices, installation materials and, if necessary, personal protective equipment
- Installation of the installation material
- Connection of devices to the building installation under consideration of local connection conditions

Improper installation will endanger your own life and the lives of people using the electrical system, and there will be a risk of serious damage to property, e. g. through fire. You will be at risk of personal liability for personal injury and damage to property. **Consult an electrically skilled person.**

Danger of electric shock. Always disconnect before carrying out work on the device or load. In so doing, take all the circuit breakers into account, which support dangerous voltages to the device and or load.

Danger of electric shock. The device is not suitable for disconnection from the supply voltage because the mains potential is applied on the load even when the device is switched off. Before carrying out work on the device or load, switch off all corresponding circuit breakers.

Danger of destruction. Connecting unsuitable valve drives, e.g. valve drives with capacitor power supply units, will cause the device and valve drive to become defective. Only connect electrothermal valve drives with ohmic behaviour to the outputs.

Danger of electric shock. Make sure there is always sufficient insulation between the mains voltage and the bus during the installation. A minimum distance of at least 4 mm must be maintained between bus conductors and mains voltage cores.

Instructions are part of the product. So keep them in a safe place.



The technical documentation on our web site contains detailed information.

2 Device components

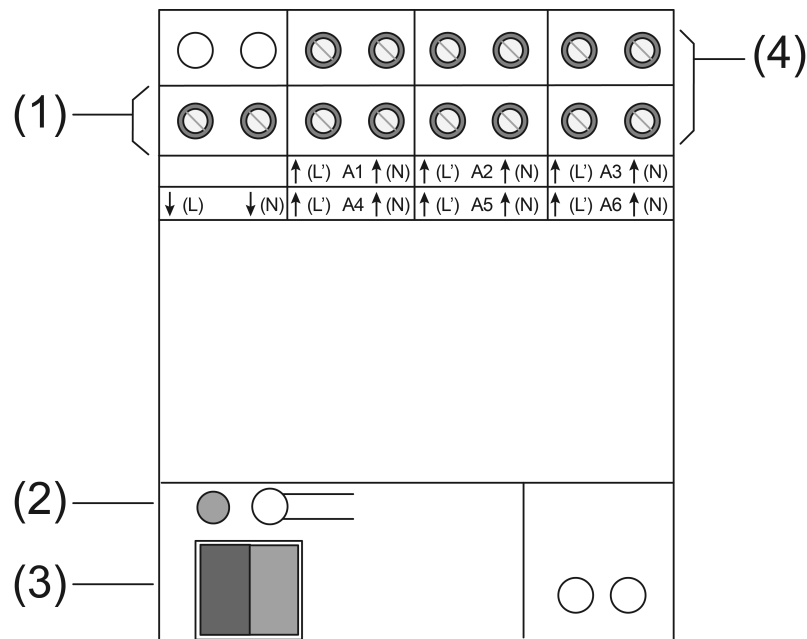


Figure 1: Front view

- (1) Supply of electrothermal valve drives
- (2) Programming button and LEDs
- (3) KNX connection
- (4) Connection of electrothermal actuators

3 Function

System information

This device is a product of the KNX system and complies with the KNX directives. Detailed technical knowledge obtained in KNX training courses is a prerequisite for proper understanding.

The function of the device depends on the software. Detailed information on software versions and the respective scope of functions as well as the software itself can be obtained from the manufacturer's product database. The device is planned, installed and commissioned with the aid of KNX-certified software. The latest versions of product database and the technical descriptions are available on our website.

Intended use

- Switching of electrothermal valve drives for heaters or cooling ceilings
- Installation in sub-distribution units on DIN rail according to DIN EN 60715

Product characteristics

- Switching operation or PWM operation
- Valve drives with characteristics opened or closed without power controllable

- Valve drives 230 V or 24 V controllable
- Disabling of individual outputs via bus
- Overload-protected, short circuit-protected
- Protection against jamming valves
- Cyclical monitoring of the input signals can be parameterized
- Feedback via bus, e.g. in case of overload or sensor failure
- Bus connection with standard bus terminal

i PWM operation: electrothermal valve drives only have the positions "open" and "closed". In PWM operation, switch-on and switch-off during the drive's cycle time achieves an almost constant behaviour.

Overload protection

In order to protect the device and connected valve drives, in case of overload or short-circuit the device determines which output is involved and switches it off. Non-overloaded outputs continue to work, which means that the rooms in question are still heated.

- In case of major overloads the actuator initially switches all off the outputs **A1...A6** off.
- In the case of more minor overloads the actuators switches output groups **A1...A3** and/or **A4...A6** off.
- The actuator determines the overloaded output in up to 4 test cycles.
- If in the event of only a minor overload it is not possible to unambiguously identify any output as overloaded, then the actuator switches individual outputs off one after the other.
- The overload can be reported to the bus for each output.

4 Information for electrically skilled persons

4.1 Mounting and electrical connection



DANGER!

Electric shock when live parts are touched.

Electric shocks can be fatal.

Always disconnect device before carrying out work on it. To do so, switch off all corresponding circuit breakers, secure them against being switched on again and check that there is no voltage. Cover up any adjacent live parts.

Mount device

Observe the temperature range. Ensure sufficient cooling.

- Mount device on DIN rail. Output terminals must be at the top.

Connect device

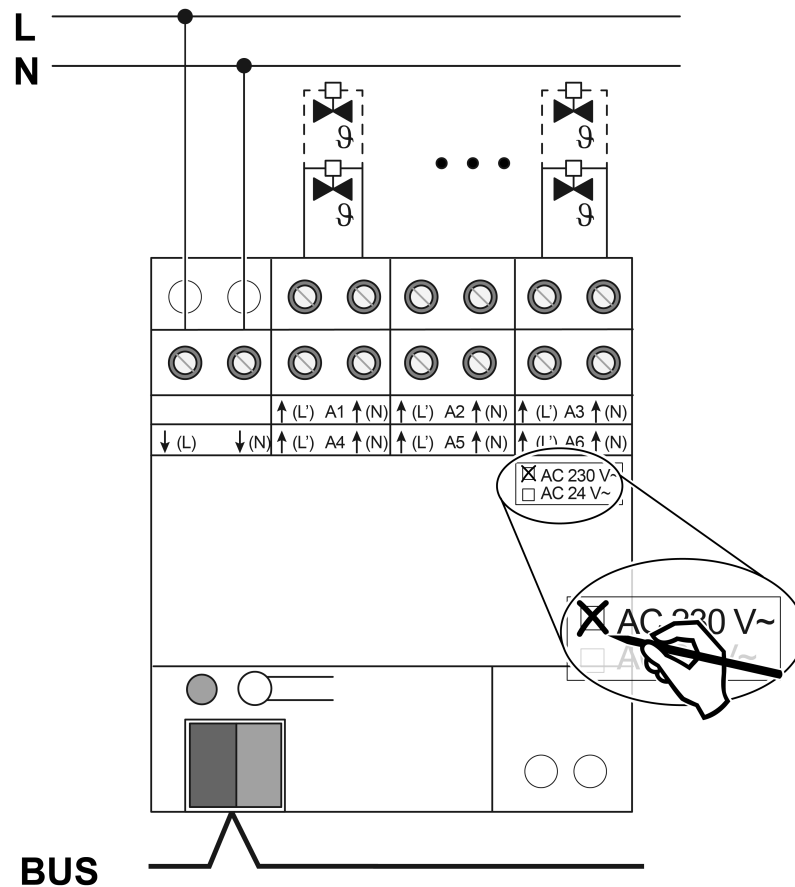


Figure 2: Connection of actuators 230 V

Connect valve drives of AC 230 V or AC 24 V to all the outputs.

Only connect valve drives with the same characteristics to each output (deenergised closed/opened).

Only connect electrothermal valve drives with ohmic behaviour. The use of unsuitable actuators, e.g. actuators with capacitor power supply units, will lead to the device and valve drive becoming defective.

Do not connect any other loads.

Connect actuators for frost-sensitive rooms to outputs **A1** and **A4**. These are switched off last in the event of overload.

Do not exceed maximum number of valve drives per output (see "Technical data").

Observe the technical data of the valve drives used.

Do not connect the neutral conductor from the output terminals through to additional devices.

- Connect the AC 230 V valve drives according to the connection diagram (see figure 2).

- Connect the AC 24 V valve drives according to the connection diagram (see figure 3).
- Connect the supply for the valve drives to the terminals ↓(L) and ↓(N) (1).
- Connect bus line with device connection terminal.

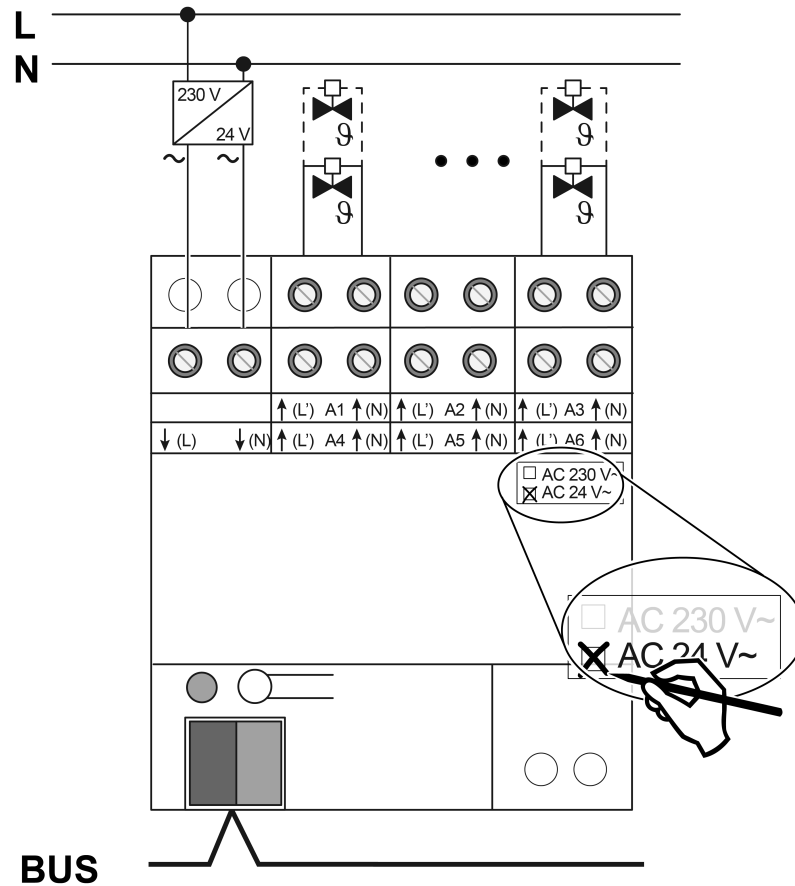


Figure 3: Connection of actuators 24 V

Installing the cover

It is necessary to install a cover to protect the bus connection against hazardous voltages in the connection area.

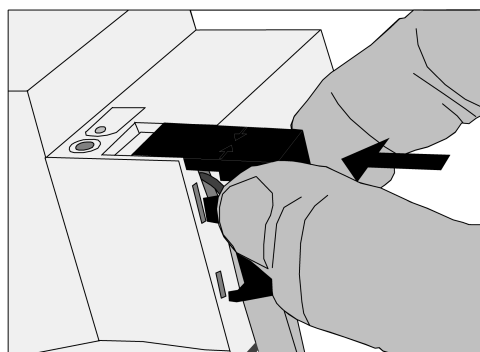


Figure 4: Installing the cover

- Route the bus line towards the rear.

- Install cover on top of the bus terminal so that it snaps into place (see figure 4).

Removing the cover

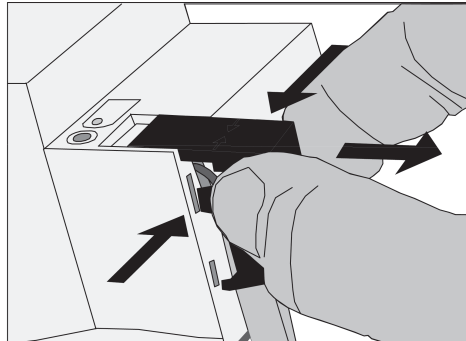


Figure 5: Removing the cover

- Press the cover to the side and pull it off (see figure 5).

4.2 Commissioning

Load the address and the application software

- Switch on the bus voltage.
- Press the programming button.
- Load the physical address into the device.
- Load the application software into the device.
- Note the physical address on the device label.

5 Technical data

Ambient conditions

Ambient temperature +5 ... +45 °C

Storage/transport temperature -25 ... +70 °C

KNX

KNX medium TP256

Commissioning mode S mode

Rated voltage KNX DC 21 ... 32 V SELV

Power consumption KNX max. 250 mW

Power loss max. 1 W

Heating outputs

Contact type Semi-conductor (Triac), ε

Switching voltage AC 24 / 230 V ~

Mains frequency 50 / 60 Hz

Switching current	5 ... 160 mA
Switch-on current	max. 1.5 A (2 s)
Switch-on current	max. 0.3 A (2 min)
Number of drives per output	
230 V drives	max. 4
24 V drives	max. 2
Housing	
Installation width	72 mm / 4 HP
Connection of outputs	
Connection mode	Screw terminal
Single stranded	0.5 ... 4 mm ²
Finely stranded without conductor sleeve	0.5 ... 4 mm ²
Finely stranded with conductor sleeve	0.5 ... 2.5 mm ²

6 Troubleshooting

Valve drives of an output or all outputs do not switch

Cause: An output is overloaded.

Determine cause of the overload switch-off. Eliminate short-circuits, replace defective valve drives. Check number of valve drives connected to the output, reduce if necessary. Do not exceed max. switching current.

Reset overload switch-off: disconnect device from mains completely for approx. 5 seconds, switch off miniature circuit-breaker. Then switch on again.

i In case of overload, initially one or both output groups switch off for approx. 6 minutes. After that the device determines which output is overloaded and switches it off permanently. This rest and test phase lasts 6 to 20 minutes.

i After resetting of the overload switch-off it is no longer possible for the device to determine which output is overloaded. If the cause is not eliminated, overload switch-off will occur again.

7 Accessories

Thermal servo 230 V~	Art. no. 2169 00
Thermal servo 24 V~	Art. no. 2179 00

8 Warranty

The warranty is provided by the specialist trade in accordance with statutory requirements. Please submit or send faulty devices postage paid together with a fault description to your responsible salesperson (specialist trade / installation company / electrical specialist trade). They will forward the devices to the Gira Service Center.

Gira
Giersiepen GmbH & Co. KG
Elektro-Installations-
Systeme

Industriegebiet Mermbach
Dahlienstraße
42477 Radevormwald

Postfach 12 20
42461 Radevormwald

Deutschland

Tel +49(0)21 95 - 602-0
Fax +49(0)21 95 - 602-191

www.gira.de
info@gira.de